

Quick Guide


Chatterbox PRO

This Quick Guide is designed to provide a simple reminder on how to program and operate Chatterbox PRO. Please refer to the *Chatterbox PRO User Manual* for full instructions.

Please ensure the unit is fully charged prior to pairing.

ENTERING A MOBILE PHONE NUMBER

1. Lightly press the **ON** button for two to three seconds, after which the Padman Stops logo will appear, followed by the STATUS screen.
2. Press the **▼** button once, bringing up the SETTINGS screen.
3. Press the **OK** button to proceed to the SMS screen.
4. Press the **OK** button again to change the telephone number. Use the **▲** and **▼** buttons to move between the letters E and D. The letter E indicates that the telephone number shown is enabled, whilst D indicates it is disabled.
5. Use the **▶** button to move across to the first digit then the **▲** and **▼** buttons as required to get to the correct digit. Once the correct digit is shown, use the **▶** button to move to the next digit and repeat the process until all digits are correct. Press **OK** once complete.

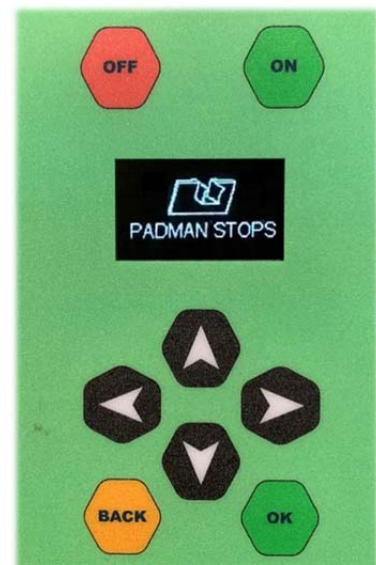

CHANGING THE TIME CLOCK

1. Lightly press the **ON** button for two to three seconds, after which the Padman Stops logo will appear, followed by the STATUS screen.
2. Press the **▼** button once to go to the SETTINGS screen.
3. Press the **OK** button to go to the TIME & DATE screen
4. Press the **OK** button again if the time or date shown is incorrect. Use the **▲** and **▼** buttons to select the correct hour then the **▶** button to move across to the minutes and date, repeating the process until the time is correct. Press **OK** once complete.

OPERATING

The Chatterbox PRO will only work when it is in sleep mode. The unit will automatically enter sleep mode approximately two minutes after the keyboard is last used.

The Chatterbox PRO will check for water every 60 seconds. If no water is present (the paddock is still dry), the visual beacon will flash **GREEN** once every minute. If it is wet, the visual beacon will flash **RED**. After three consecutive wet detections, an SMS message will be sent to the mobile number(s) programmed into the unit.

An **ORANGE** flashing visual beacon indicates an error condition.

WHEN NOT IN USE

When the Chatterbox PRO is not in use, press the **OFF** button to fully power it down.